

Fitting instructions spare wheel holder Fiat Ducato 15 & 16 inch

List of contents:

Spare wheel holder


4x Flange bolt M8 x 25
2x Flange nut M8
1x Lobe knob (E)

2x Bolt M10x110
2x Locking nut M10
4x Flat washer M10
1x Bolt M8 x 20
1x Serrated washer M8




Installation procedure:

1. Mount part A to part B by using the two M8 flange nuts (only tighten by hand)
2. Fit the winding mechanism (parts A + B) to the right hand side of the vehicle by using:
2x Bolt M10x110
4x Flat washer M10
2x Locking nut M10
Tighten all bolts and nuts with tools (also parts A+B from step 1)
Attention. Bolts holes may need to be enlarged in some occasions!

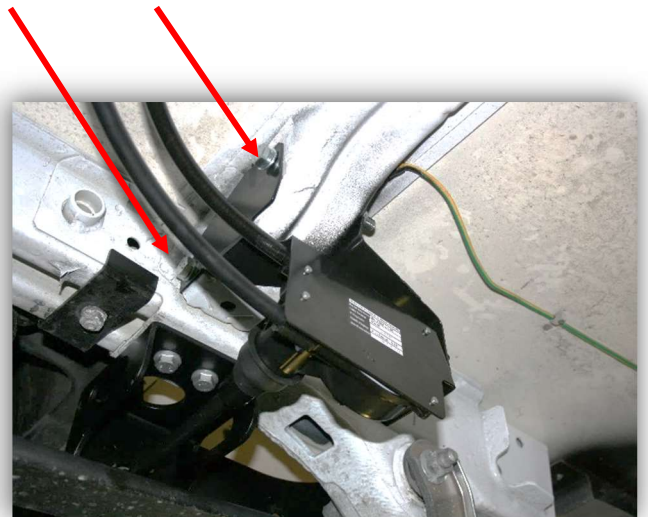

Fitting instructions spare wheel holder Fiat Ducato 15 & 16 inch

3. Fit the upper support (part C) to the rear chassis traverses by using the four M8 x 25 flange bolts

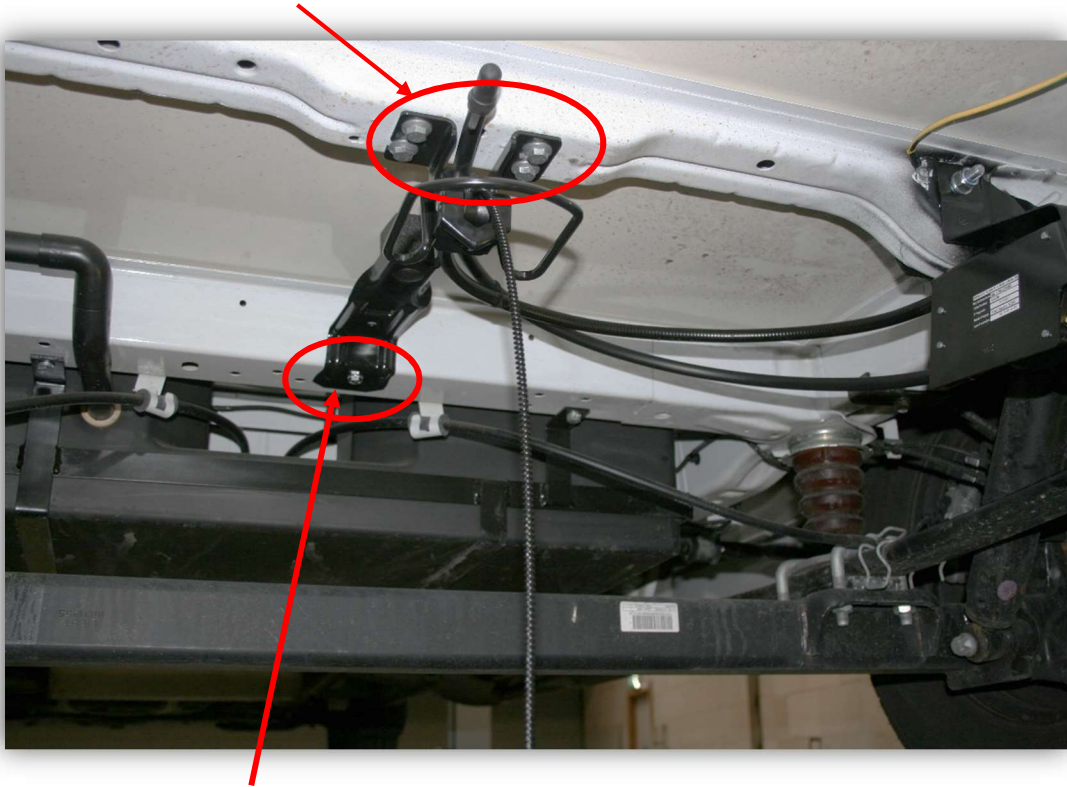

4. Fit the support bracket (part D) to the front chassis traverse by using:
1x Bolt M8x20
1x Serrated washer M8
5. Pull the end of the winding mechanism through the centre hole of the spare wheel and secure it with the lobe knob (part E)



6. The spare wheel can be wound up by operating the winch with the crank. Wind the spare wheel all the way up until it locks automatically.